



Installation

1. Inspect the transition for damage.
2. Install transition in the Supply/ Return opening of curb as shown.