


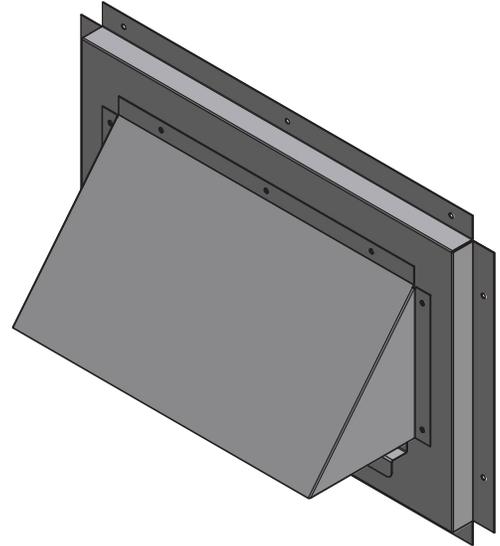

Manual Damper Installation

110-LX-39

1. Remove horizontal return opening cover.
2. Secure the damper on the opening using the screws provided.
3. Loosen the set screws on the slide damper and pull down to adjust the fresh air opening to achieve the amount of fresh air required.
4. Tighten the set screws to secure the slide damper.



Motorized Damper Installation

112-LX-39

1. Disconnect power to the unit.
2. Remove horizontal return opening cover.
3. Secure the damper on the opening using the screws provided.
4. Loosen the set screws on the slide damper and pull down to adjust the amount of fresh air required.
5. Tighten the set screws to secure the slide damper.
6. Remove control section cover.
7. Remove evaporator access panel.
8. If the unit is equipped with a plug for the economizer, disconnect the factory jumper from the plug and connect the plug from the motorized damper.
9. If the unit is not equipped with a plug, cut the plug from the motorized damper and feed two wires (field provided) from the control section to the motorized damper. Connect one of the field provided wires to the green actuator lead and one to the green lead using wire nuts or other approved method.
10. In the control section, connect one of the field provided leads to the fan from the thermostat and the fan pig tail in the unit and the other to the common pig tail in the unit.
11. Replace the control section cover and evaporator access panel.
12. Restore power to the unit.

